


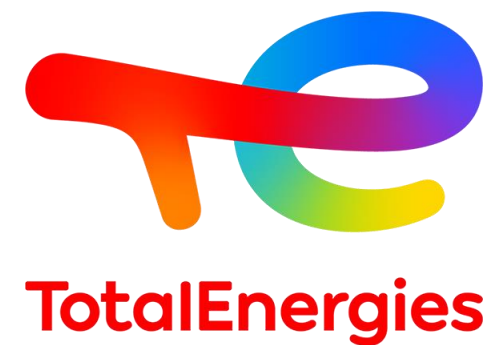


MyMonitor New user guide

New redesign of user experience

From February 2025


Summary

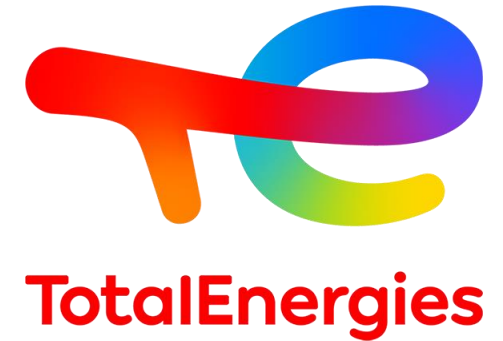


- 1 Dashboard page
- 2 Vessel page
 - A/ Overview
 - B/ Equipement
 - C/ Analysis Page
- 3 Form : create a sample

*Please note, this is a document containing only new fonctionnalities we have made in the past few months for better user experience.
We will send you another document later with the entire fonctionnalites of my monitor application.*

1- Dashboard page

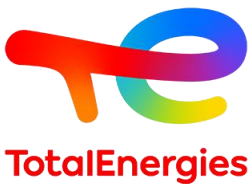

This is the new Dashboard Page

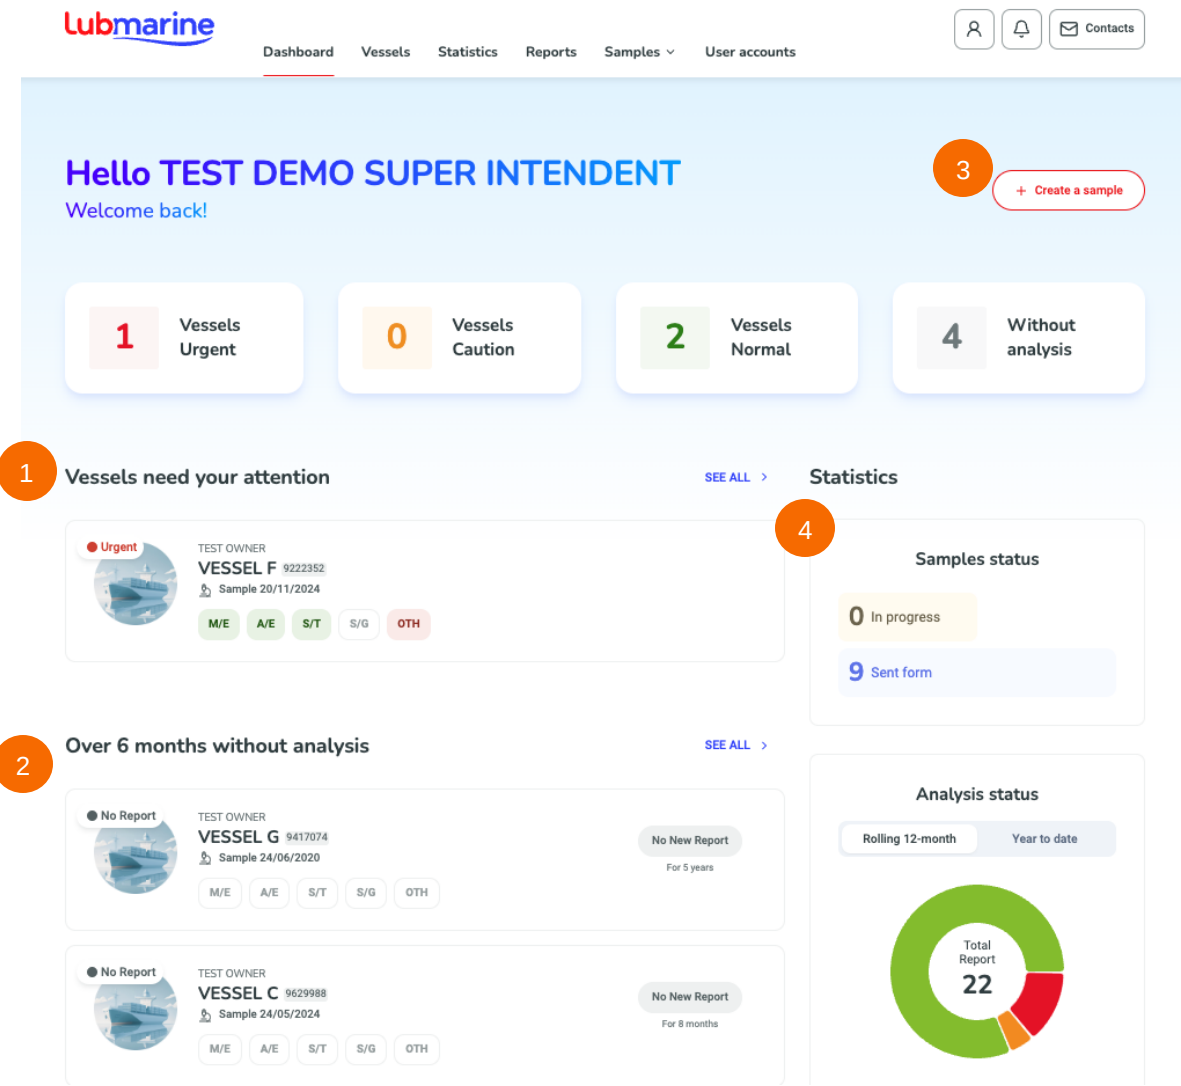

- 1 - New block « Vessel need your attention » means vessel which have some analysis in urgent and caution only
- 2 - New block « Over 6 months without analysis » which refers to vessels that have not received analysis for more than 6 months
- 3 - Possibility to create sample
- 4 - New block « Statistics » with some graphs
 - Sample status : Shows you the sample that are currently sent or in progress
 - Analysis status : Shows you the number of all your reports with their status






 Contact:

- 1 The user will have the possibility to sort by newest sample date, oldest sample date, by alphabetically..
- 2 He can also filter by status, show only new reports, or sort by equipment family by using this new block.

2- Vessel page 2/3

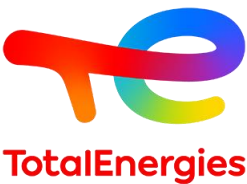

Here some examples

- 1 Example 1: The user has filtered by « Urgent » status and we can see displayed the « VESSEL F ». It is the only one that has an analysis in urgent which belongs to « other equipment » family.

Vessel

Q Search by vessel name, by IMO

7 vessels (Only the 50 first vessels are displayed. Refine your search)

Sort Newest sample

Urgent

TEST OWNER
VESSEL F 9222352
Sample 20/11/2024

M/E A/E S/T S/G OTH

FILTERS

Reset all

1

Status
Status count for displayed ships.
☒ Urgent (1)
☐ Caution (0)
☐ Normal (2)
☐ No Report (4)

Vessel
☐ Only with new report

Equipment
Type
All families
Status
All status
[+ Add an other type](#)

- 2 Example 2: The user has filtered by « Oldest sample » we can see displayed several vessels with no new report for a while...

Vessel

Q Search by vessel name, by IMO

7 vessels (Only the 50 first vessels are displayed. Refine your search)

Sort Oldest sample

No Report

TEST OWNER
VESSEL G 9417074
Sample 24/06/2020

M/E A/E S/T S/G OTH

No New Report
For 5 years

No Report

TEST OWNER
VESSEL A 9538907
Sample 15/12/2023

M/E A/E S/T S/G OTH

No New Report
For 1 year

No Report

TEST OWNER
VESSEL B 9415325
Sample 07/05/2024

M/E A/E S/T S/G OTH

No New Report
For 8 months

No Report

TEST OWNER
VESSEL C 9629988
Sample 24/05/2024

M/E A/E S/T S/G OTH

No New Report
For 8 months

FILTERS


Reset all

Status
Status count for displayed ships.
☐ Urgent (1)
☐ Caution (0)
☐ Normal (2)
☐ No Report (4)

Vessel
☐ Only with new report

Equipment
Type
All families
Status
All status
[+ Add an other type](#)

2- Vessel page 3/3

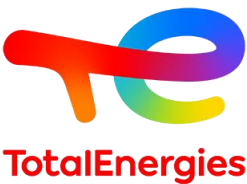

Vessel

Q Search by vessel name, by IMO

7 vessels (The 1000 first vessels are displayed. Refine your search)

Sort Newest sample

Urgent

TEST OWNER

VESSEL F 9222352

Sample 20/11/2024

M/E

A/E

S/T

S/G

OTH

FILTERS

Reset all

Status

Status count for displayed ships.

☐ Urgent (1)

☐ Caution (0)

☐ Normal (0)

☐ No Report (0)

Vessel

☐ Only with new report

Equipment

Type

Status


Other Equipment

Urgent

+ Add an other type


Example 3 : The user has filtered by family equipment « Other equipment » and has chosen the urgent status.

He will see only vessels that have some analyses in urgent in the « Other Equipment » family.

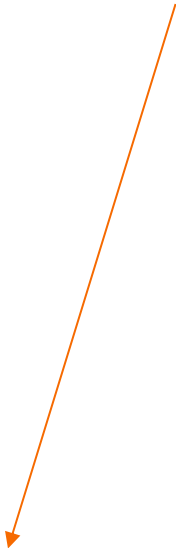


2)A- Vessel page – Overview

On this page you can see an overview of your vessel.

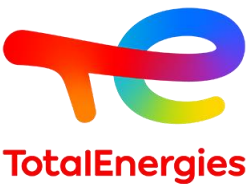


You will see for your vessel :

- 1 - Number of equipment with their status
Here you can see total number of equipment with their status..
- 2 - Possibility to create your sample
Here you have the possibility to create your sample directly for this specific vessel
- 3 - Equipment need your attention (Urgent and Caution)
Here you can see all equipment which are some analysis in urgent and caution
- 4 - Equipment without analysis for more than 6 months
Here you can see all Sample points that have not received analysis for more than 6 months..
- 5 - Statistic section :
 - *Sample status : Status of your samples that are currently sent or in progress for this vessel*
 - *Analysis status :Total number of reports made during the current year with their statuses for this vessel*
 - *Analysis by equipment category : Number of analyses by equipment category which have been made for this vessel.*

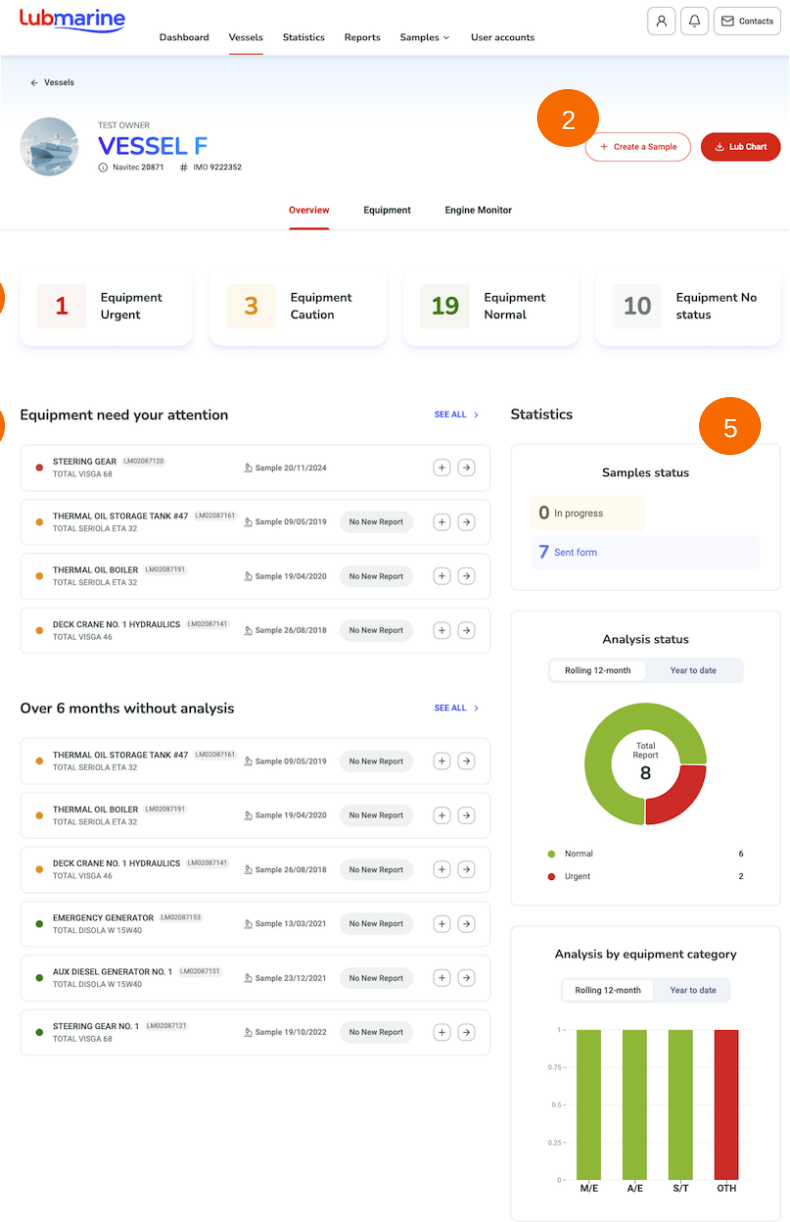

2)A- Vessel page – Overview – No analysis for over 6 months

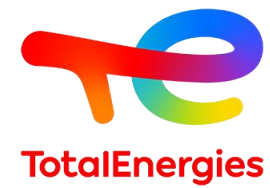

Dashboard

Vessels

Statistics

Reports

Samples

User accounts

Contacts

TEST OWNER

VESSEL C

Navitec 30205

IMO 9629988

+ Create a Sample

Lub Chart

Overview

Equipment

Engine Monitor

0

Equipment Urgent

0

Equipment Caution

0

Equipment Normal

34

Equipment No status

Equipment need your attention

There are currently no equipments in urgent and caution

Over 6 months without analysis

MAIN SHAFT BEARING

LM03020511

TOTAL ATLANTA MARINE D 3005 30

Sample 24/05/2024

No New Report

DECK CRANE 4

LM03020570

TOTAL EPONA Z 150

Sample 24/05/2024

No New Report

DIESEL GENERATOR # 2

LM03020552

TOTAL AURELIA TI 3030 30

Sample 24/05/2024

No New Report

STERN TUBE

LM03020581

TOTAL BIONEPTAN 100

Sample 24/05/2024

No New Report

CRANE # 4

LM03020578

TOTAL VISGA 32

Sample 24/05/2024

No New Report

CRANE # 1

LM03020575

TOTAL VISGA 32

Sample 24/05/2024

No New Report

Statistics

Samples status

0

In progress

0

Sent form

Analysis status

Rolling 12-month

Year to date

There is no analysis displayed for this period.

Analysis by equipment category

Rolling 12-month

Year to date

M/E

A/E

S/T

S/G

OTH


1 In this case all your analyses are considered as « no status » because the last analysis was performed more than 6 months.

2 Even if you have some analysis in urgent and caution, they will not be displayed in this area because they are more than 6 months old.

You will find all your analyses made in the section « Over 6 months without analysis »

8 |

2)B- Vessel page – *Equipment* page

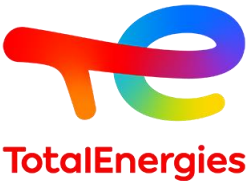

Lubmarine

DashboardVesselsStatisticsReportsSamplesUser accounts

← Vessels

TEST OWNER

VESSEL F

Navitec 20871IMO 9222352

3

+ Create a Sample

↓ Lub Chart

OverviewEquipmentEngine Monitor

1

Search by Equipment name, SPN, Lubricant

2

All equipmentsMain EngineStern TubeSteering GearAuxiliary EngineOther EquipmentMore filters

Main Engine

M/E LUBE OIL FILTERLM02087104TOTAL AURELIA TI 4020 ISO

No analysis

+→

MAIN ENGINELM02087101TOTAL AURELIA TI 4020 ISO

Sample 05/11/2024

+→

Stern Tube

STERN TUBELM02087181TOTAL AURELIA TI 4030 ISO

Sample 12/03/2021

No New Report

+→

FWD STERN TUBELM02087182TOTAL AURELIA TI 4030 ISO

Sample 15/11/2024

+→

- 1 You have possibility to filter by equipement family.
- 2 You have the possibility to use additional filters for see only sample points that are in urgent for exemple...
- 3 By clicking on the « + » you can create a sample. By clicking on the arrow you will be redirected to analysis page.

FILTERS





Status

- ☐ Urgent 1
- ☐ Caution 3
- ☐ Normal 19
- ☐ No status 1

Equipment


- ☐ Without analysis for over 6 months 20
- ☐ Only with new report 0

2)C- Vessel page – Analysis page

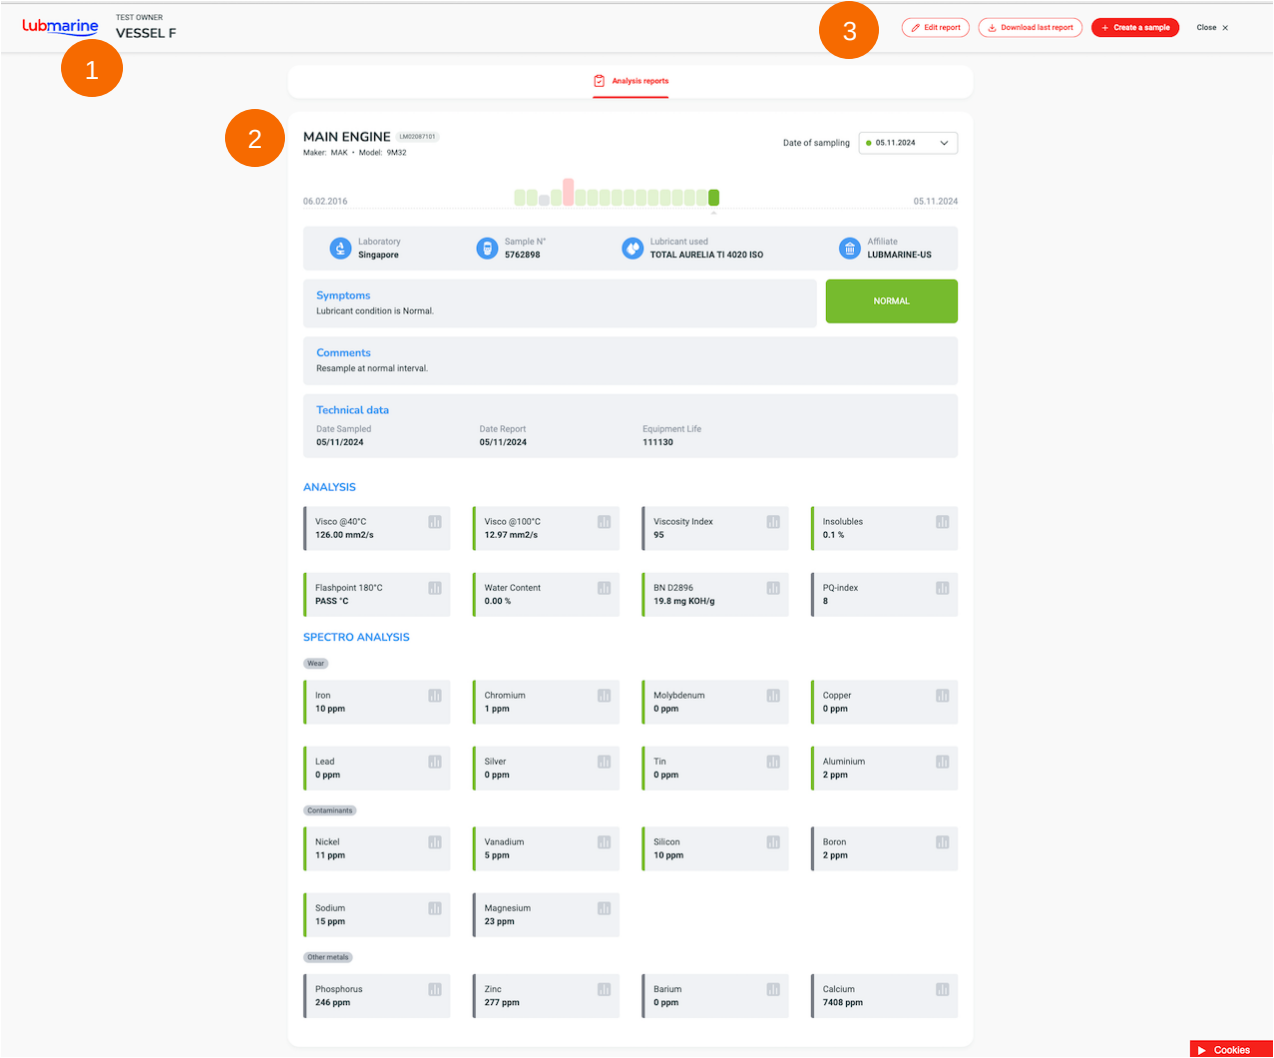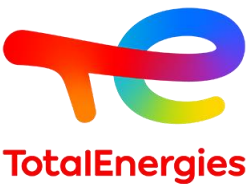

- 1 Customer and vessel name.
- 2 Sample point name
- 3 Possibility for client to edit report information, download last report and create sample.

3)Form create sample 1/2

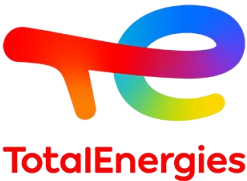

Step 1 : Vessel

- Select Ship
- Select Sample point

Vessel

>

2. Sample

>

3. Oil

Validate

REGISTER A NEW SAMPLE

Vessel condition

Ship

VESSEL F

Sample point

Select a sample point

Cancel

Next

Step 2 : Sample

- Select sample date
- Select Sample no
- Select Port of Mailing (optional)
- Select purifier (optional)

Vessel

>

2. Sample

>

3. Oil

Validate

REGISTER A NEW SAMPLE

Sample

Sample date

03/02/2025

Sample No

03022025

Your sampling number can not exceed 8 characters

Port of Mailing

Zelzate

Purifier (optional)

Before

Back

Next

Step 3 : Oil condition

- Select oil
- Fill Oil hours, Equipement hours... (optional)

Vessel

>

2. Sample

>

3. Oil

Validate

REGISTER A NEW SAMPLE

Oil condition

Oil

TOTAL DISOLA W 15W40

Oil hours (optional)

Equipment hours (optional)

Top up (optional)

Auxiliary blowers


T/C cut out valves

Remarks (optional)

Back

Next

3)Form create sample 2/2

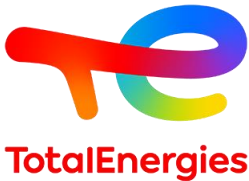

Step 4 : Validation
Summary before validation and shipment.

☒ Vessel

>

☒ 2. Sample

>

☒ 3. Oil

>

Validate

REGISTER A NEW SAMPLE

Validation

^ Vessel condition

Ship

VESSEL F

Sample point

EMERGENCY GENERATOR (LM02087153)

^ Sample

Sample Date

03/02/2025

Sample No

03022025

Port of Mailing

Zelzate

Purifier

Before

^ Oil condition

Oil

TOTAL DISOLA W 15W40

Auxiliary blowers

Yes

T/C cut out valves

Yes

Remarks

-/-

Back

Send

Step 5 : You will be redirected to the « created registrations » page, where your sample will be displayed.

Lubmarine

DashboardVesselsStatisticsReportsSamplesUser accounts

Contacts

Created registrations

Q

Search Vessel, Customer, LM unit, Sample point info, Sample N°

10 samples created

Vessel/Customer	LM Unit	Sample Point Info	Sampling Date	ID sample	Laboratory	Status	
VESSEL F SLNC	LM02087152	AUX DIESEL GENERATOR NO. 2	03/02/2025	03022025	Belgium	Created	

12 |

THANK YOU